

# Инструкция пользователя User manual

AVS220W, AVS240K, AVS320K

|               |   |
|---------------|---|
| Русский ..... | 2 |
| English ..... | 9 |

Благодарим Вас за покупку телевизора AVEL. Перед установкой и использованием, пожалуйста, ознакомьтесь с инструкцией.

Пожалуйста, сохраните инструкцию для использования в будущем.

Инструкция может быть изменена без предварительного уведомления.




## Предупреждение

Во избежание риска пожара, удара электрическим током или других повреждений соблюдайте меры предосторожности во время установки и использования телевизора. Электрическая розетка должна быть легко доступна, иметь заземление и быть подключенной к УЗО (Устройство Защитного Отключения).








- Во избежание удара электрическим током не допускайте попадание воды на блок питания, электрическую розетку и коммутационные провода.
- Не перегружайте электрическую сеть. Перегрузка может стать причиной пожара.
- Необходим родительский контроль при использовании техники детьми.
- Не используйте телевизор, если есть повреждения самого продукта или любой его части, в особенности блока питания и электрической проводки.
- Избегайте соприкосновения блока питания с нагретыми/горячими поверхностями.
- Если Вы заметили дым или посторонний запах от телевизора, немедленно отключите прибор от электрической сети и обратитесь в сервисный центр.
- Не используйте и не храните легковоспламеняющиеся вещества рядом с телевизором.
- Используйте телевизор только по его прямому назначению.
- Телевизор предназначен только для использования в помещениях.
- Для безопасности отключайте телевизор от электрической сети и антенны на время длительного отсутствия и во время грозы.
- Не применяйте моющие средства, содержащие абразивные вещества.

# Комплект поставки

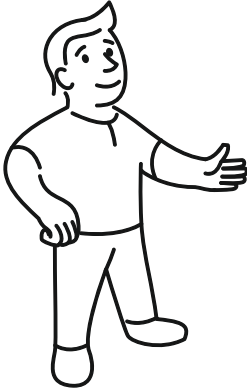


Пожалуйста, убедитесь, что комплект поставки телевизора состоит из следующих предметов:

1. Набор крепежных винтов x 2 шт.
2. Крепежные хомуты x 2 шт.
3. Инструкция по установке x 1 шт.
4. Установочный чертеж x 1 шт.
5. Инструкция «Перед первым включением» x 1 шт.
6. Пульт ДУ x 1 шт.\*\*
7. Адаптер AC/DC x 1 шт.

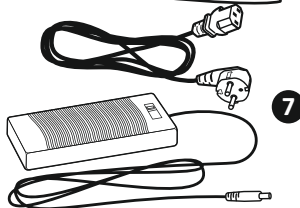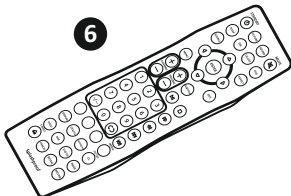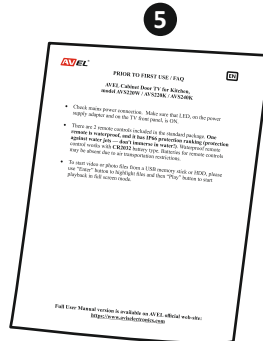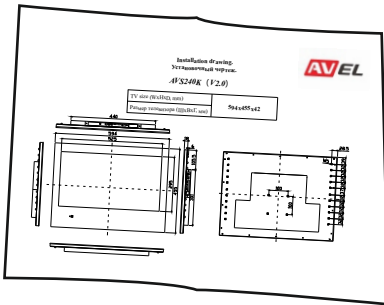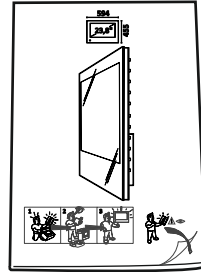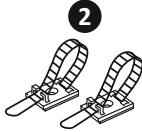


\*Изображения могут отличаться от реального вида комплектующих.  
\*\* Модели AVS240K и AVS320K могут комплектоваться вторым премиальным пультом.

# Пульт дистанционного управления



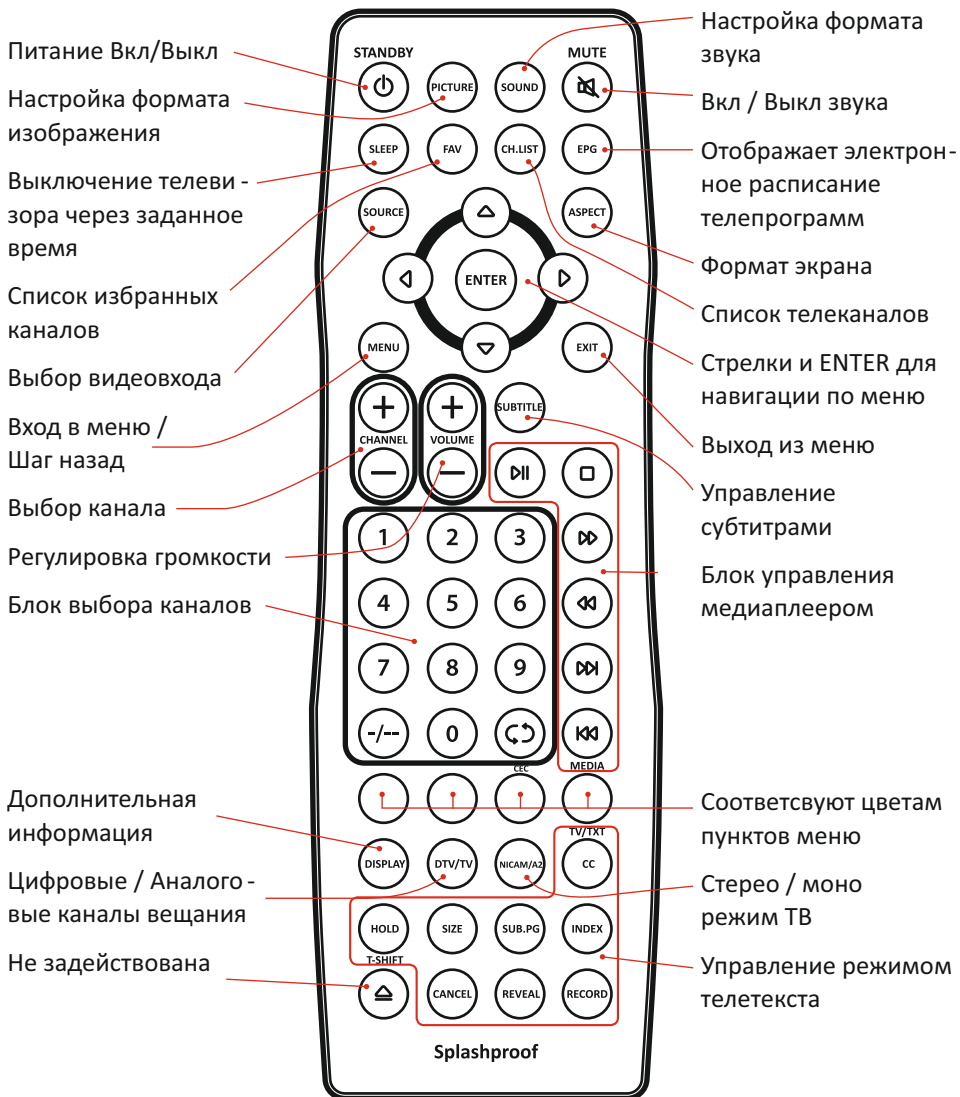


## Замена батарейки


Модель CR2032

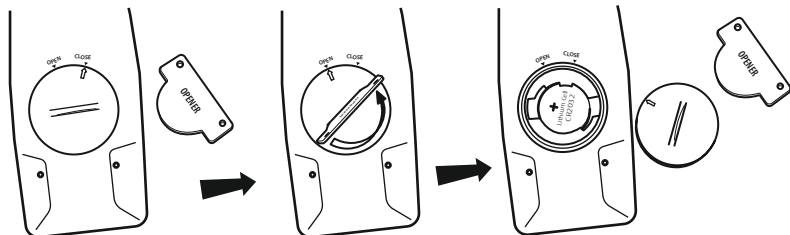

# Коммутация

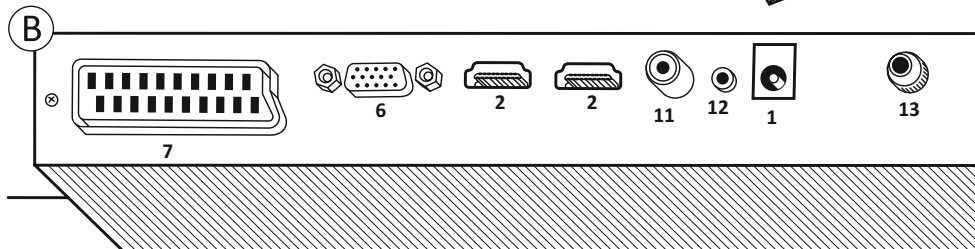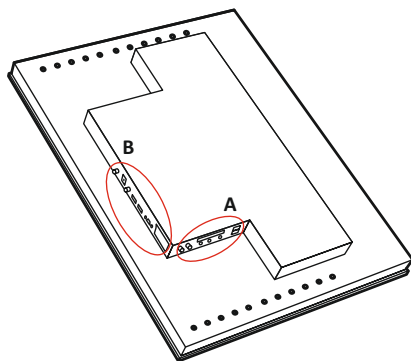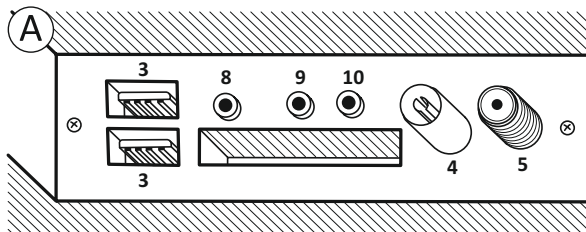

Power x 1

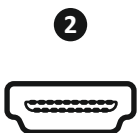

HDMI input x 2



USB-port x 2




TV x 1



TV(S/S2) x1



VGA x 1

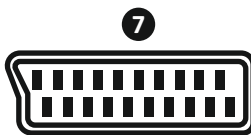

SCART x 1



PC audio x 1



mini AV x 1



Mini YPBPR x 1



SPDIF coaxial port x 1



Earphone x 1\*




IR control x 1\*\*

\* Для внешних наушников.

\*\* Для внешнего ИК ресивера и функции IR pass through.


\*\*\* Расположение разъемов может отличаться.

# Настройка

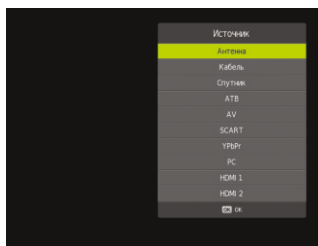


## Выбор видеовхода

1. Нажмите кнопку SOURCE
2. Стрелками выберите нужный видеовход.
3. Нажмите ENTER для подтверждения.
4. Используйте кнопку EXIT для выхода.

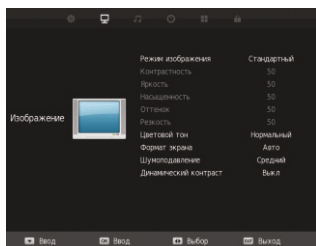


## Настройка изображения

Предназначена для регулировки цвета и яркости изображения, настройки шумоподавления и динамического контраста.

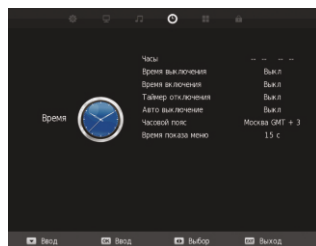

## Настройка времени

Предназначена для настройки часового пояса, автоматического вкл./выкл. и времени показа меню.

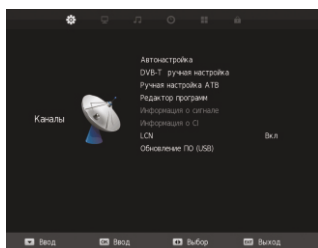


## Настройка ТВ тюнера

Предназначена для настройки цифрового и аналогового ТВ тюнеров. Ручная настройка доступна только для текущего видеовхода. LCN — автоматическая сортировка каналов.




## Настройка звука

Предназначена для настройки эквалайзера, автоматической регулировки громкости и эффекта объемного звука.

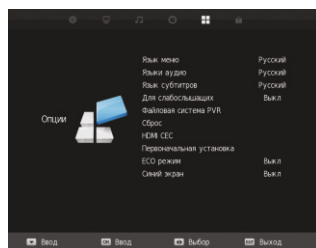

## Настройки меню


Раздел содержит языковые настройки, функцию сброса всех настроек. HDMI CEC — позволяет передавать управляющие сигналы по HDMI.

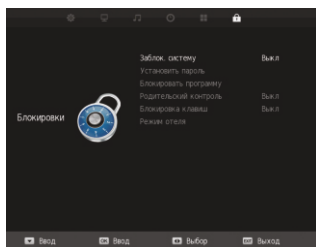

## Настройки безопасности

Позволяют установить пароли и заблокировать программы.

## Кнопки управления\*

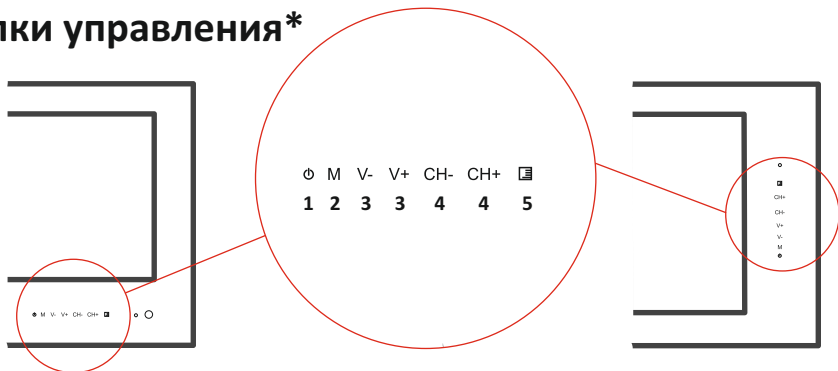

- 1 Питание Вкл/Выкл
- 2 Вход в меню
- 3 Регулировка громкости
- 4 Выбор канала
- 5 Выбор источника

## Решение проблем



### Симптом


Нет изображения



### Возможное решение

Проверьте светодиод на передней панели ТВ. Если он красный, то телевизор выключен. Если светодиод зеленый, попробуйте выбрать другой видеовход. Если светодиод не горит, проверьте линию питания и светодиод на блоке питания.

Не работает пульт



Направьте пульт на ТВ, нажмите кнопку питания и проверьте, стал ли светодиод телевизора зеленым. Если нет, то замените батарейку на новую.

\* Опция

# Поддерживаемые форматы медиаплеера

| Медиа     | Расширение файла | Кодек                            |                           | Примечание   |   |
|-----------|------------------|----------------------------------|---------------------------|--|---|
|           |                  | Видео                            | Аудио                     |  |   |
| Видео     | .mpg             | MPEG-1, MPEG-2                   |                           | Max Resolution: 1920*1080<br>Max Data Rate: 40 Mbps                        |   |
|           | .avi             | DivX, Xvid, MJPEG                |                           | Max Resolution: 1920*1080<br>Max Data Rate: 20 Mbps                        |   |
|           |                  | MPEG-4 SP/ASP, H.263/H.264       | MP3, WMA, AAC, AC3, PCM   |  |   |
|           | .ts              | MPEG-2, H.264, AVS, AVS+, HEVC   |                           |  |   |
|           | .mov             | MPEG-4 SP/ASP, H.263/H.264, HEVC |                           |  |   |
|           | .mkv             | MPEG-4 SP/ASP, H.263/H.264, HEVC |                           |  |   |
|           | .dat             | MPEG-1                           |                           |  |   |
|           | .mp4             | MPEG-4 SP/ASP, H.263/H.264, HEVC |                           |  |   |
|           |                  | MPEG-1, MPEG-2                   |                           |  |   |
|           | .vob             | MPEG-2                           |                           |  | Max Resolution: 720*576<br>Max Data Rate: 40 Mbps |
| .rm/.rmvb | RV30/RV440       | COOK, MP2                        | Max Resolution: 1920*1080 |  |   |
| Музыка    | .mp3             | -                                | MP3                       | Sample rate: 8K—48kHz<br>Bit rate: 32K—320 Kbps<br>Channel: Mono / Stereo  |   |
|           | .wma             | -                                | WMA                       | Sample rate: 16K—48kHz<br>Bit rate: 32K—442 Kbps<br>Channel: Mono / Stereo |   |
|           | .m4a/a.ac        | -                                | AAC                       |  |   |
| Фото      | .jpg             | Progressive JPEG                 |                           | Max resolution: 1024*768   |   |
|           | .jpeg            | Baseline JPEG                    |                           | Max resolution: 15360*8640   |   |
|           | .bmp             | BMP                              |                           |  | Max resolution: 9600*6400                         |
|           |                  |                                  |                           |  | Pixel Depth: 1/4/8/16/24/32 bpp                   |
|           | .png             | Non-Interlaced                   |                           | Max resolution: 9600*6400  |   |
|           | Interlaced       |                                  | Max resolution: 1280*800  |  |   |





Thank you for choosing AVEL TV! Before using and installing the product, please read this guide.

Please keep this manual for future reference.

Information in this manual is subject to change without prior notice.




## Warnings

To reduce the risk of fire, electrical shock and other injuries, keep these safety precautions in mind when installing, using, and maintaining your TV . The socket-outlet should be installed near the equipment, be easily accessible. The TV should be connected to a grounded GFCI protected main socket outlet.

- To protect against electric shock, do not immerse the power cord, power plug or product in water or other liquid.
- Do not overload AC outlets or extension cords. Overloading can cause fire.
- Close adult supervision is necessary when any product is used by or near children.
- Do not operate the product with a damaged cord or plug or if it has been damaged in any manner.
- Do not let the power cord get in contact with hot surfaces.
- If you notice any smoke or scorched smell near the product, unplug power cord and refer to qualified personnel for service or repair .
- Do not use or place any combustible or flammable substances near the product.
- Do not use this product for other than intended use.
- This product is only intended for use indoors.
- For added safety, during a light storm, or when this product is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna .
- Do not use cleaning detergents containing abrasives .


# Accessories

Please make sure that the accessories in the package are as shown below:

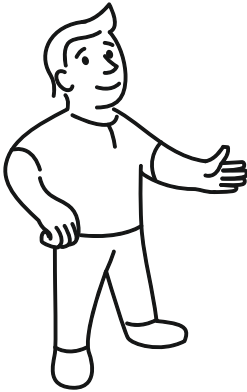


1. Mounting bolts set x 2 pcs.
2. Retaining clips x 2 pcs.
3. Installation instruction x 1cs.
4. Installation drawing x 1 pcs.
5. Prior to First Use x 1 pcs.
6. Remote control x 1 pcs.\*\*
7. Power adapter x 1 pcs.

3

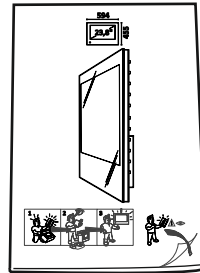


1




2




5

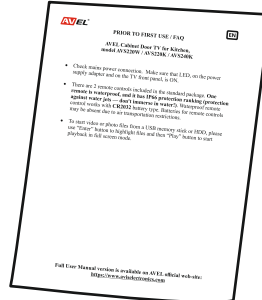


4

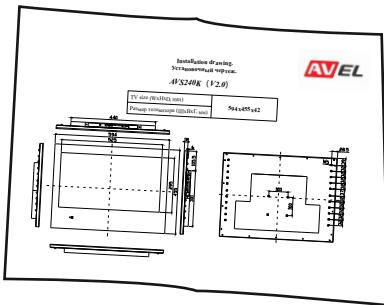

6

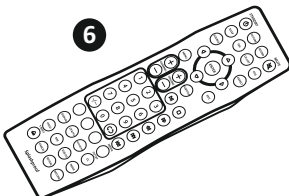


7

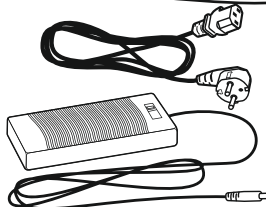

\*Image is given for reference and may be different with the actual components


\*\* AVS240K & AVS320K can be equipped with a second premium remote control (option).

# Remote control



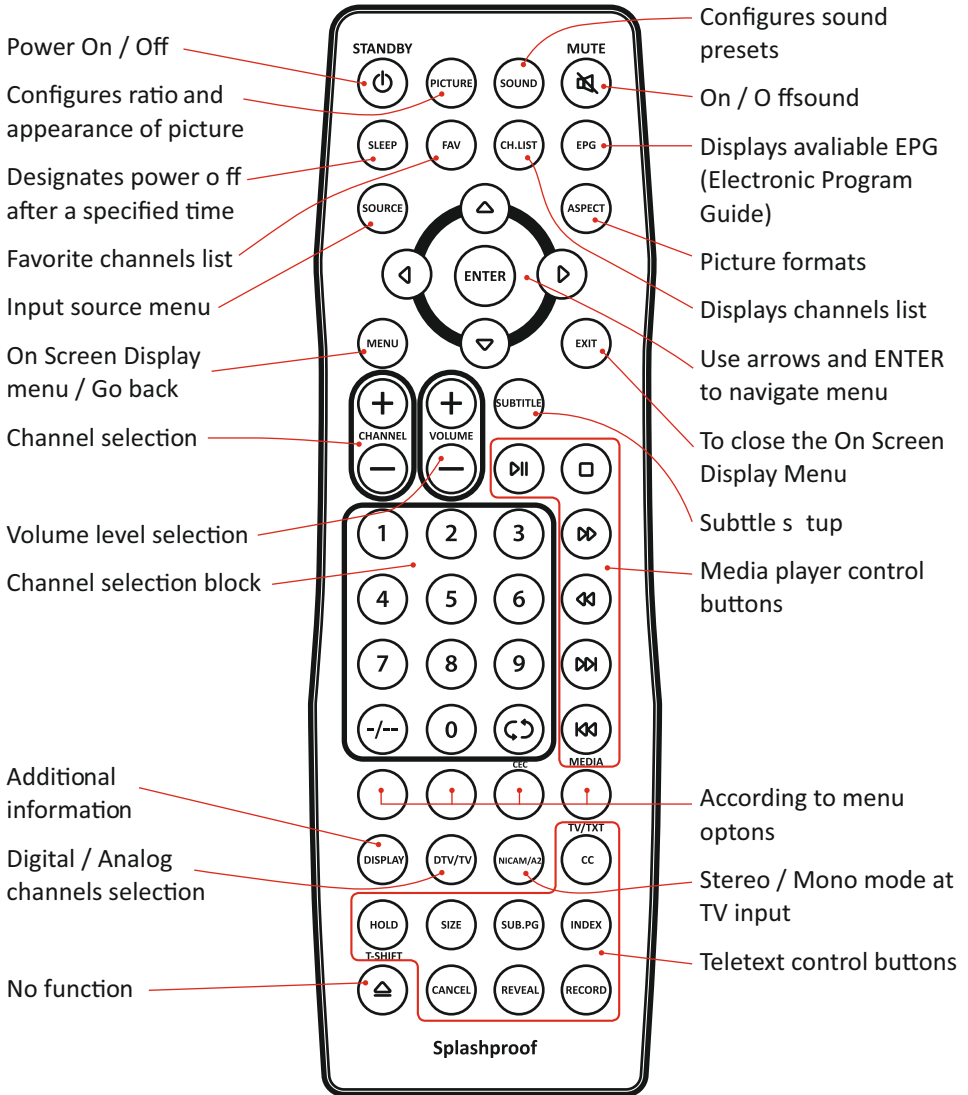


## Battery replacement


Battery type CR2032

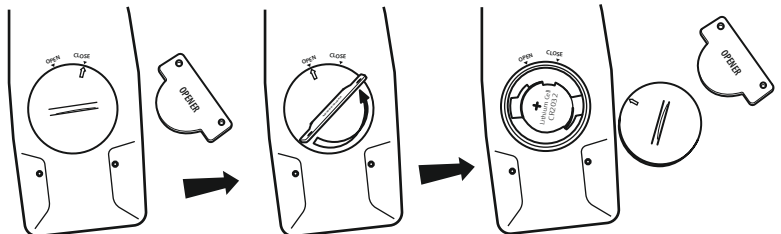

# Inputs and Outputs

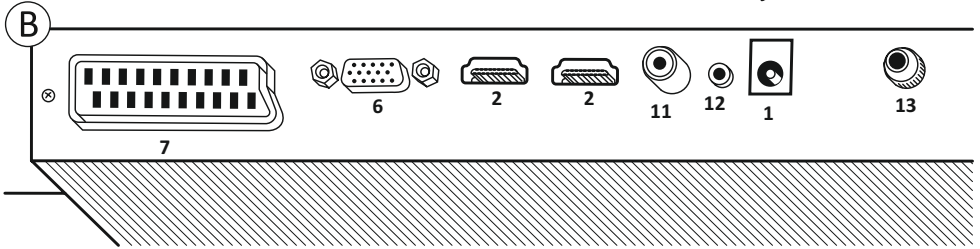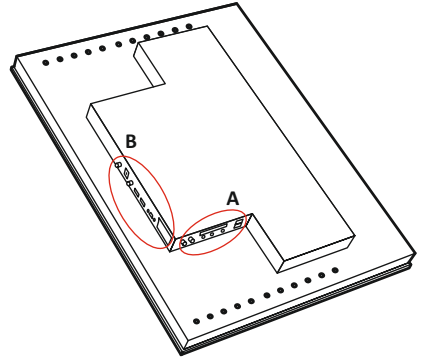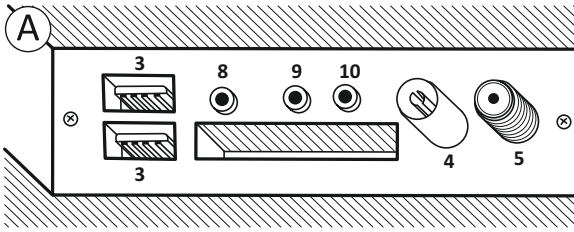

Power x 1

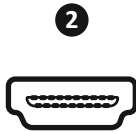

HDMI input x 2




USB-port x 2




TV x 1



TV(S/S2) x 1



VGA x 1

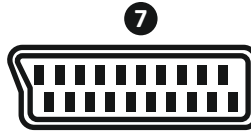

SCART x 1



PC audio x 1



mini AV x 1



Mini YPBPR x 1



SPDIF coaxial port x 1



Earphone x 1\*




IR control x 1\*\*

\* For external Earphones .

\*\* For external IR receiver or IR pass through connecton.


\*\*\* Location of connectors might be changed.

# Settings

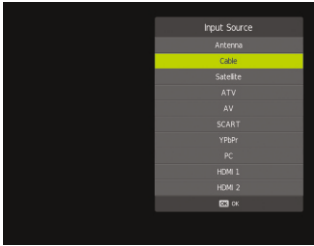

## Input Source selecton

- 1 . Press SOURCE buton
- 2 . Use arrows to choose the desired input
- 3 . Press ENTER to confirm selection
- 4 . Use EXIT buton to close menu.

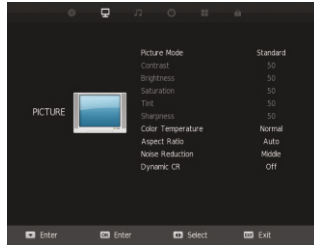

## Video settings

Offers you to setup image characteristics, such as colour and brightness, noise reduction and dynamic CR.




## Time setup

Menu offers options o setup time one, auo On/ O fffunctns and sleep tmer.



## TV tuner settings

Menu offers options to setup and adjust preferences using the built-in television tuner. Manual Tuning is available only for current input. LCN – Logical Channel Number.

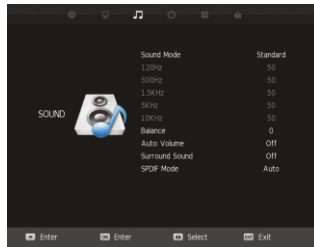


## Sound settings

Offers you to setup sound equalization, Auto Volume and Surrond Sound option.



## Setup Menu


Menu contains language settings, reset all function. HDMI CEC – for control external device by HDMI.

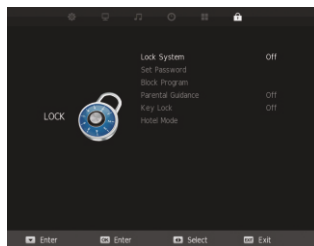

## Parental menu

Offers options to restrict program and set access password.

## Panel butons\*

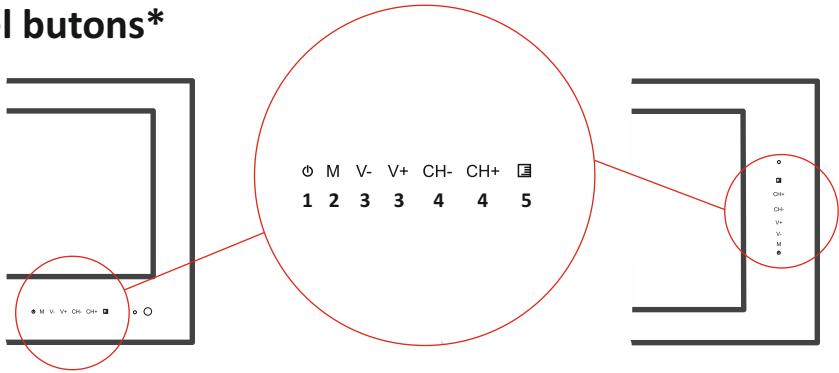

- 1 Power On/Off
- 2 On Screen Display menu
- 3 Volume level selection
- 4 Channel selection
- 5 Input source menu

## Troubleshooting



### Symptoms


Blank screen



### Possible Solution

Check the indication LED. If the indication LED is red, the TV is in standby. If the indication LED is green, try to change input source. If the indication LED is black, check the power connection and indication LED at power adapter.

Remote control doesn't work



Point the remote control to the TV and press power button on the remote control. If the status LED become green, remote control works. If it does not, replace the bateries of the remote control.

\* Option

# Supported Media File Types (by USB)

| Media     | File Extension | Codec                            |                           | Remark   |   |
|-----------|----------------|----------------------------------|---------------------------|--|---|
|           |                | Video                            | Audio                     |  |   |
| Movie     | .mpg           | MPEG-1, MPEG-2                   |                           | Max Resolution: 1920*1080<br>Max Data Rate: 40 Mbps                        |   |
|           | .avi           | DivX, Xvid, MJPEG                |                           | Max Resolution: 1920*1080<br>Max Data Rate: 20 Mbps                        |   |
|           |                | MPEG-4 SP/ASP, H.263/H.264       | MP3, WMA, AAC, AC3, PCM   |  |   |
|           | .ts            | MPEG-2, H.264, AVS, AVS+, HEVC   |                           |  |   |
|           | .mov           | MPEG-4 SP/ASP, H.263/H.264, HEVC |                           |  |   |
|           | .mkv           | MPEG-4 SP/ASP, H.263/H.264, HEVC |                           |  |   |
|           | .dat           | MPEG-1                           |                           |  |   |
|           | .mp4           | MPEG-4 SP/ASP, H.263/H.264, HEVC |                           |  |   |
|           |                | MPEG-1, MPEG-2                   |                           |  |   |
|           | .vob           | MPEG-2                           |                           |  | Max Resolution: 720*576<br>Max Data Rate: 40 Mbps |
| .rm/.rmvb | RV30/RV440     | COOK, MP2                        | Max Resolution: 1920*1080 |  |   |
| Music     | .mp3           | -                                | MP3                       | Sample rate: 8K—48kHz<br>Bit rate: 32K—320 Kbps<br>Channel: Mono / Stereo  |   |
|           | .wma           | -                                | WMA                       | Sample rate: 16K—48kHz<br>Bit rate: 32K—442 Kbps<br>Channel: Mono / Stereo |   |
|           | .m4a/a.ac      | -                                | AAC                       |  |   |
| Photo     | .jpg           | Progressive JPEG                 |                           | Max resolution: 1024*768   |   |
|           | .jpeg          | Baseline JPEG                    |                           | Max resolution: 15360*8640   |   |
|           | .bmp           | BMP                              |                           |  | Max resolution: 9600*6400                         |
|           |                |                                  |                           |  | Pixel Depth: 1/4/8/16/24/32 bpp                   |
|           | .png           | Non-Interlaced                   |                           | Max resolution: 9600*6400  |   |
|           | Interlaced     |                                  | Max resolution: 1280*800  |  |   |





## AVIS ELECTRONICS OVERSEAS LIMITED

**Manufacturer:** 506-507A, HuiGu ChuangXin Technology park, JingBei road, Shiyan town , Baoan district, Shenzhen, Guangdong, China, 518108

For more details, please visit [www.aviselectronics.com](http://www.aviselectronics.com)

**Юридический адрес изготовителя:** 506-507A, HuiGu ChuangXin Technology park, JingBei road, Shiyan town , Baoan district, Shenzhen, Guangdong, China, 518108

**Импортер:** ООО «Авис электроникс»

**Юридический адрес импортера:** 125167, г. Москва, Планетная ул., д. 11, пом. 12/11 РМ-2

За дополнительной информацией, пожалуйста, заходите на [www.aviselectronics.ru](http://www.aviselectronics.ru)

Made in China | Сделано в Китае

