

x8

A1

blum

DTC



x8

A2

KESSEBÖHMER

HÄFELE





x4

B




1

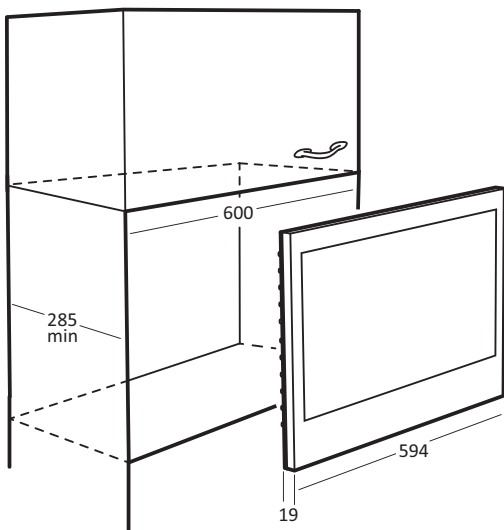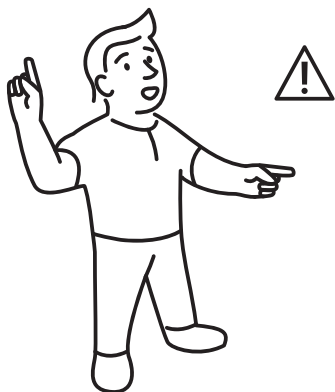

2



A

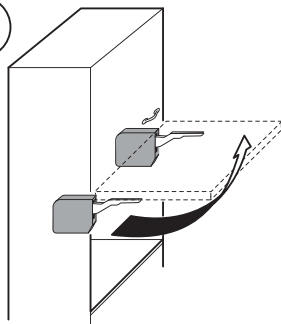

1

blum
Aventos HK29

DTC
DTC TOP STAY SF
SF00AH02A

2


blum
Aventos HK TOP29

KESSEBÖHMER
FREEflap forte-F

3

HÄFELE
Free Flap 3.15 F

B

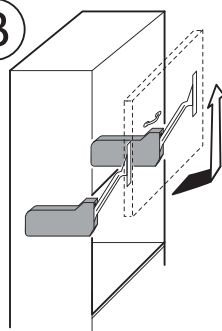

1

blum
Aventos HL27/38

2

KESSEBÖHMER
FREESlide Q4us

HÄFELE
Free Up Q4us






A1




blum

Aventos HK29

DTC
Global Quality Benchmark

DTC TOP STAY SF

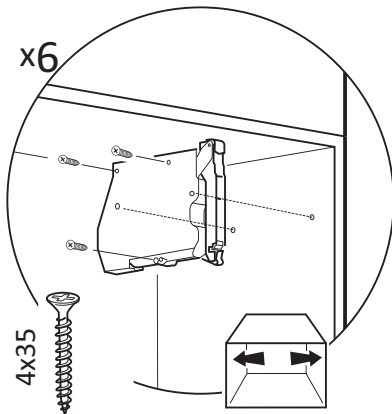
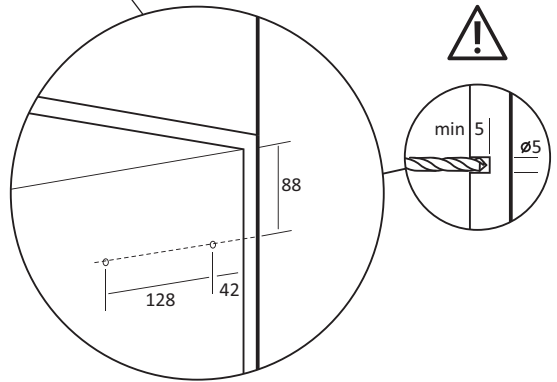
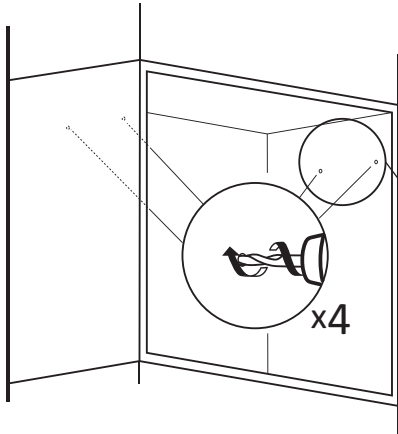


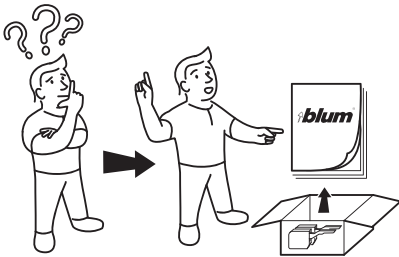
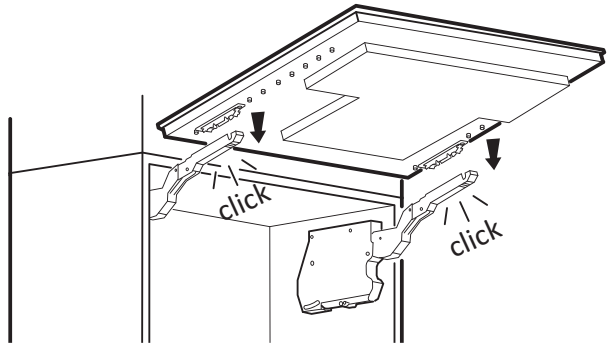
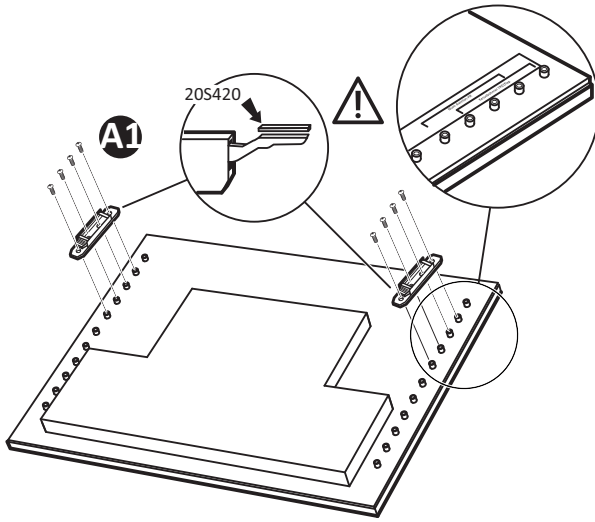


A2

blum

Aventos HK TOP29

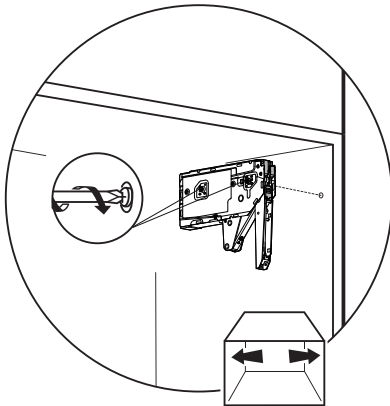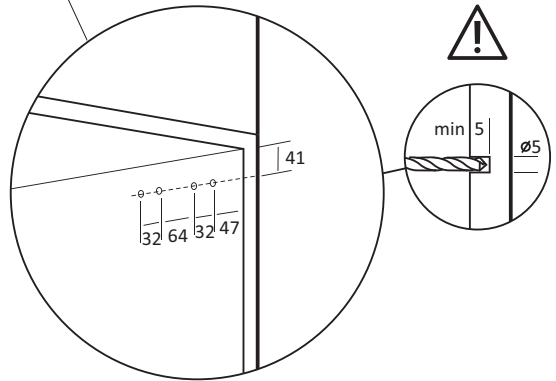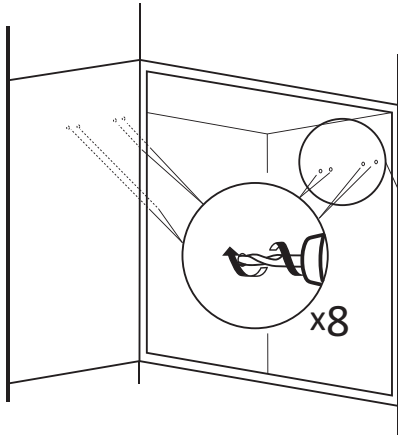


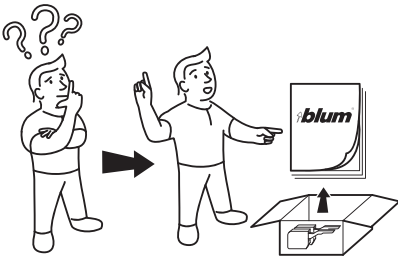
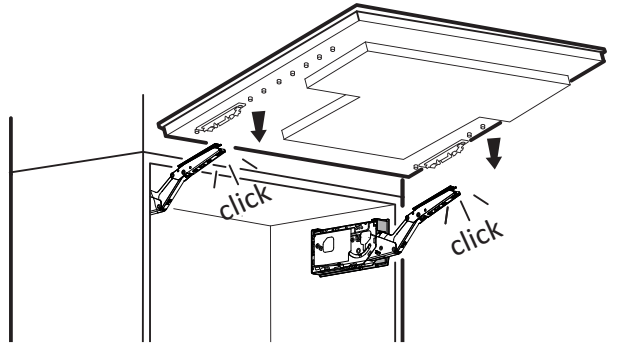
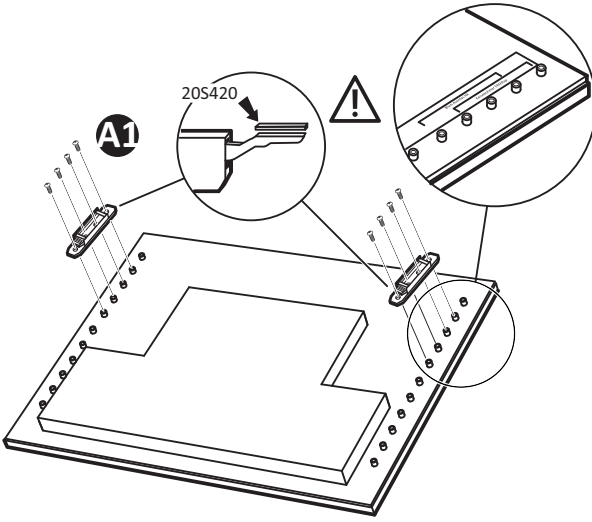


A 3

KESSEBÖHMER
FREEflap forte-F

HÄFELE
Free Flap 3.15 F



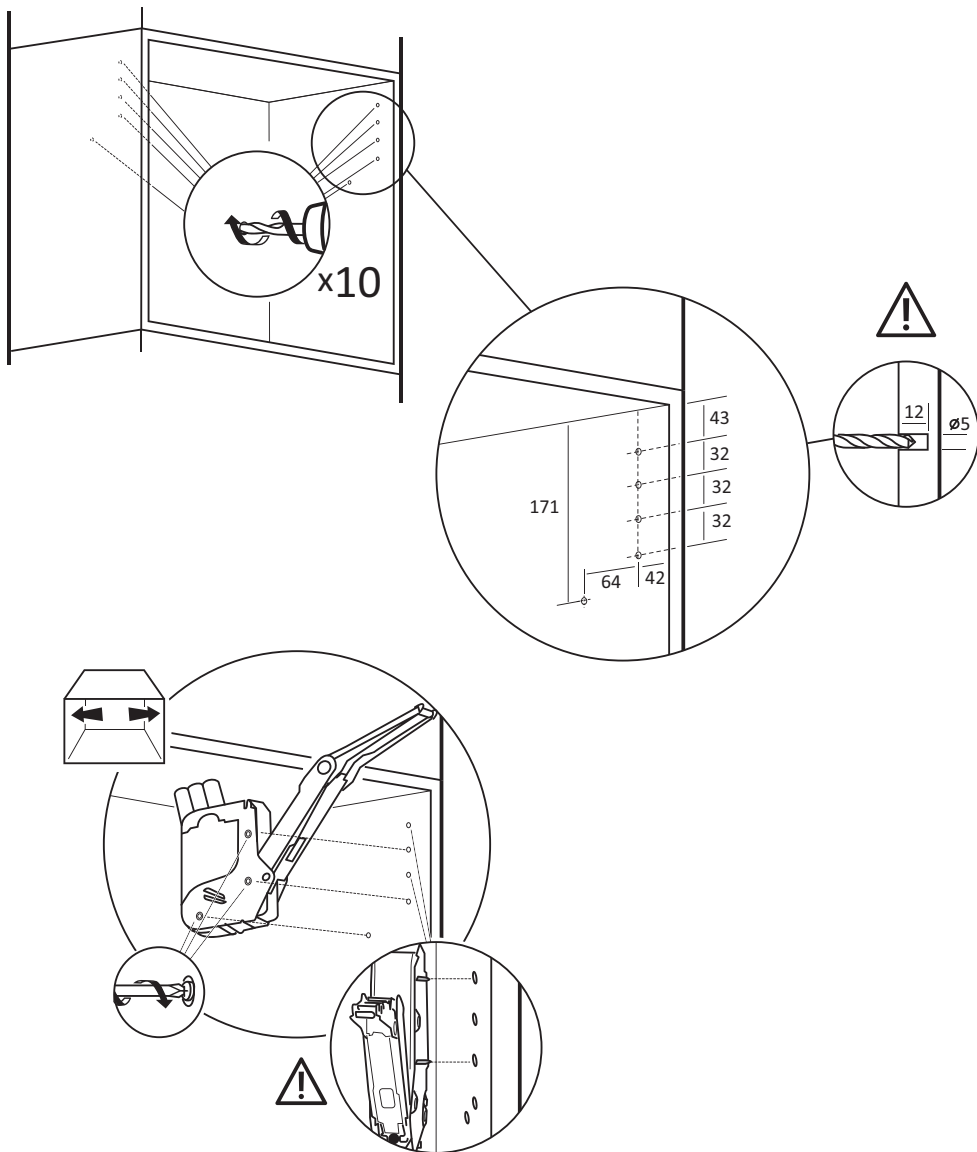



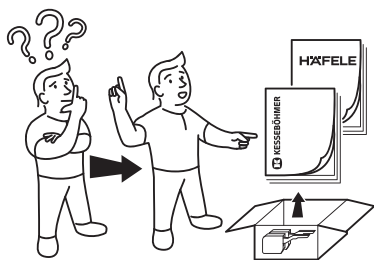
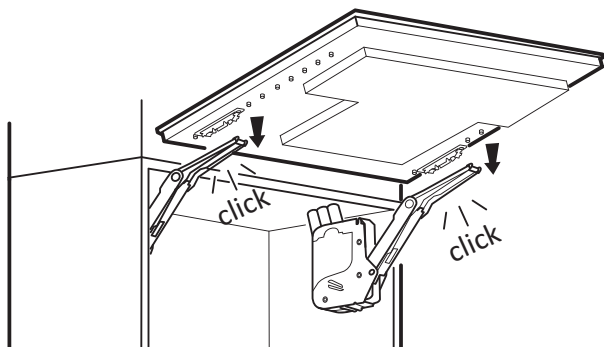
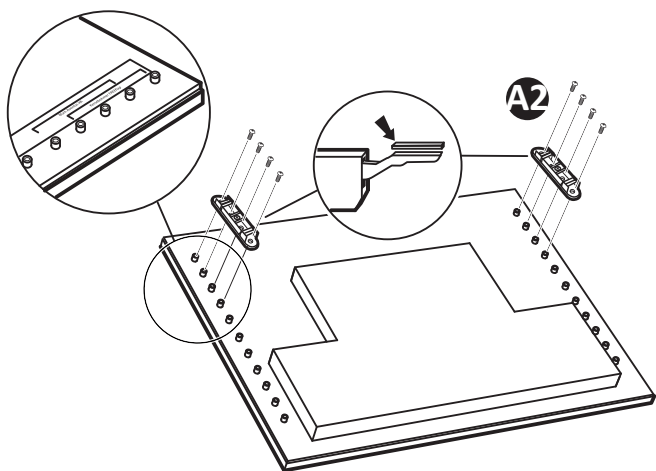






B1

blum

Aventos HL27/38

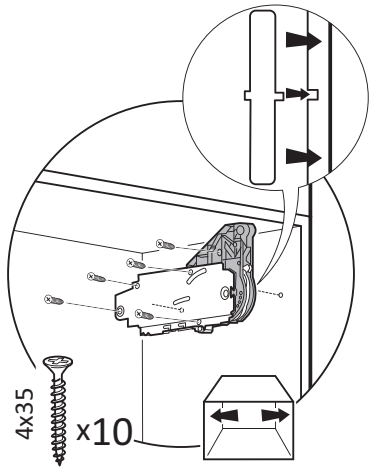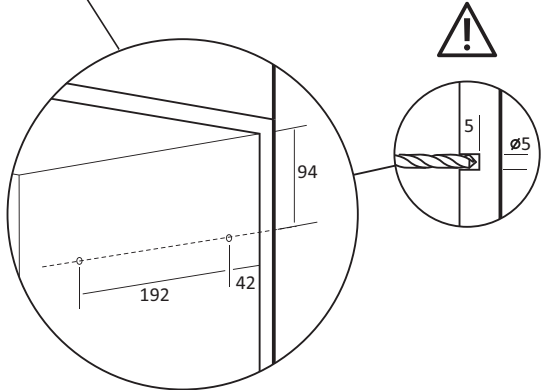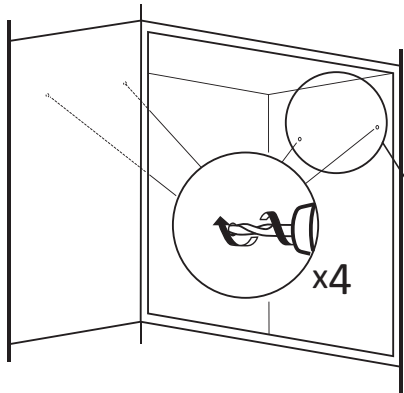

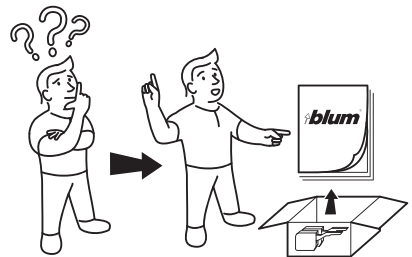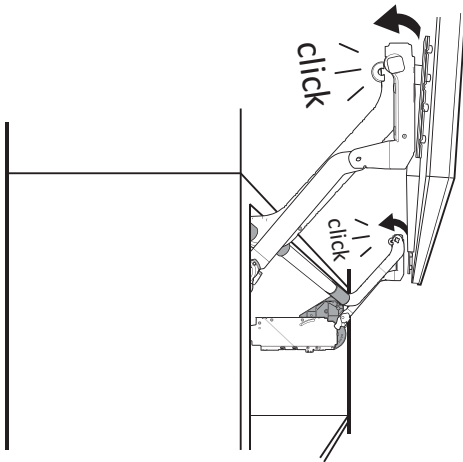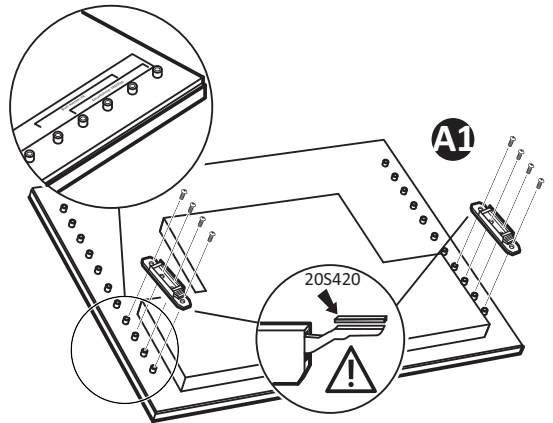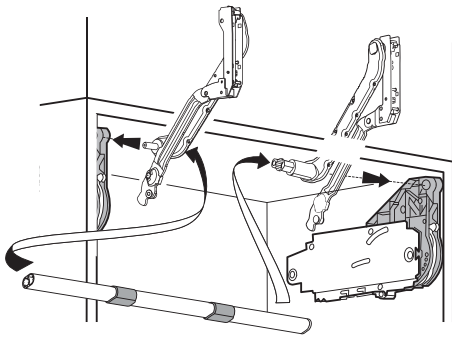


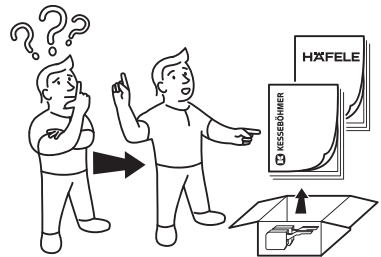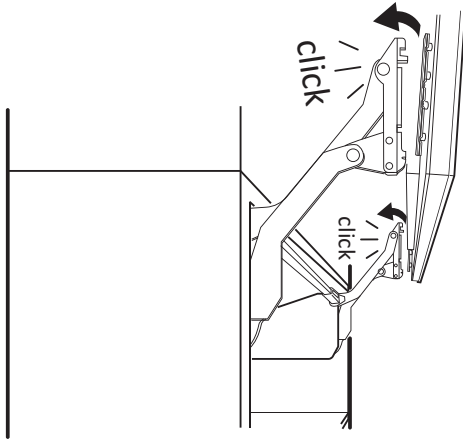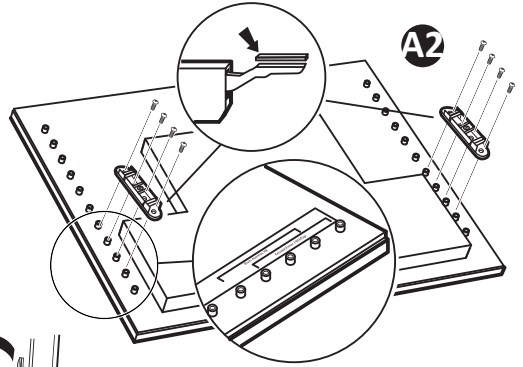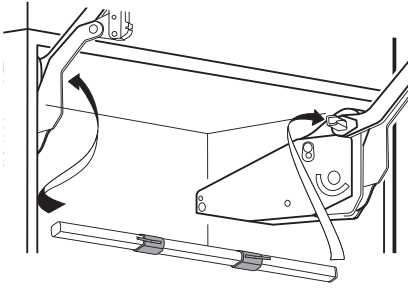


3




A

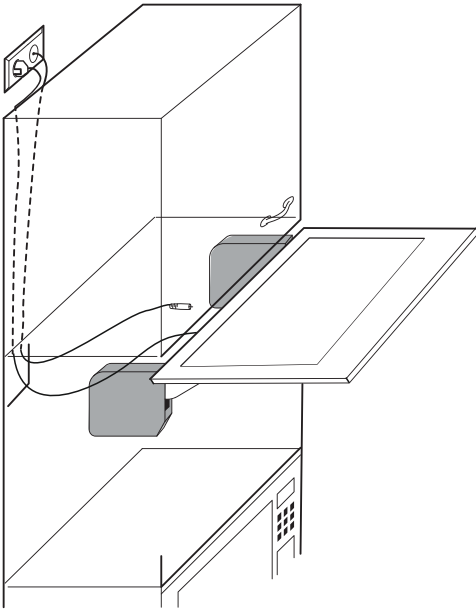




B

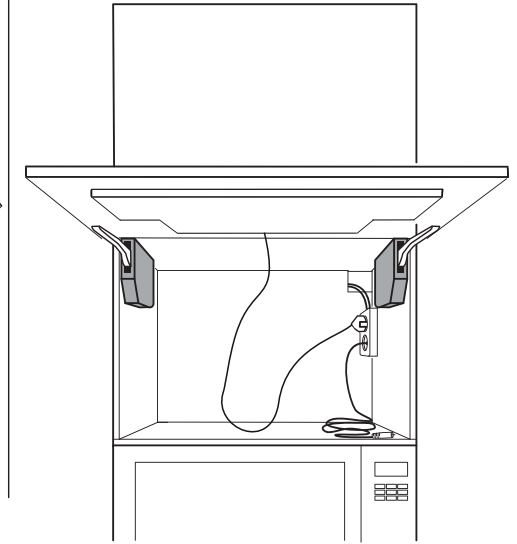





4

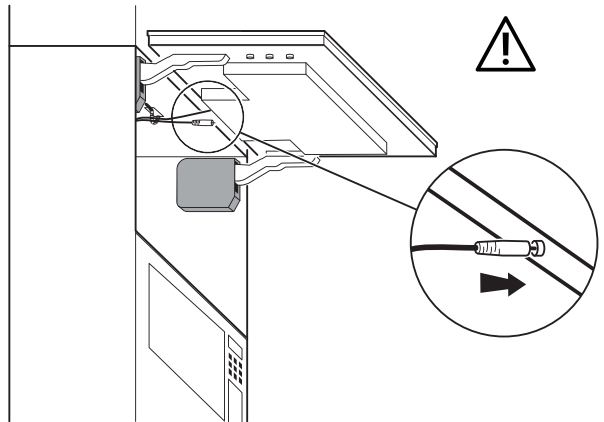

5

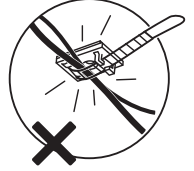
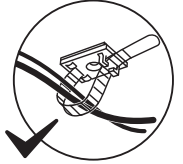
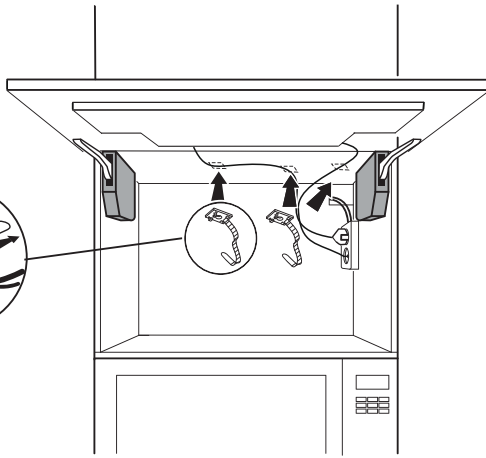


6

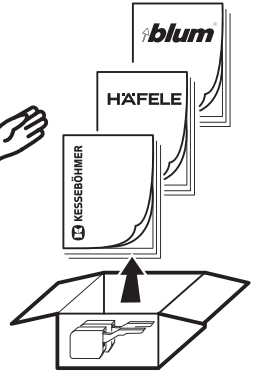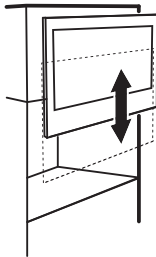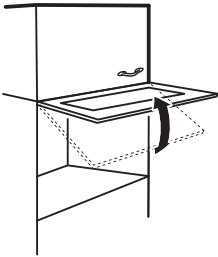
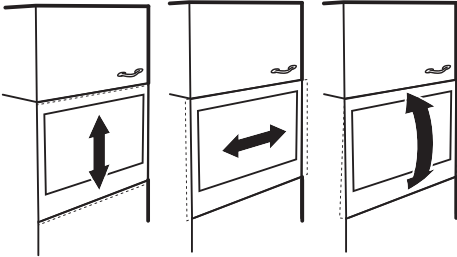


7

A

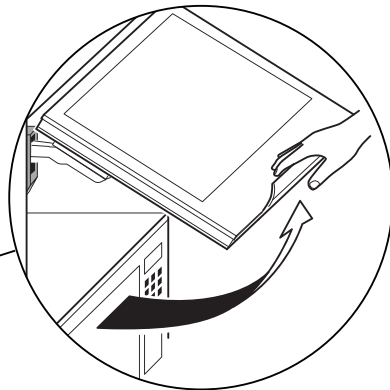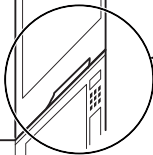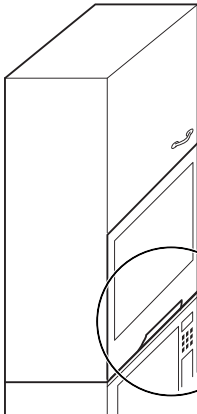

B

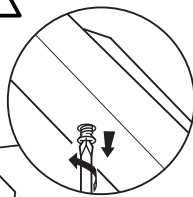

x5

